

The Mandalorian Pro Ramp Upgrade-Kit


Part No. 10002180 at pu-parts.com

Tip: To simplify reassembly, please take photos of each step as you disassemble.

Preparation: Please remove the disk of the device and pull out the playfield in maintenance position. If available, please use Assembly Blades (part No. 10000009 at pu-parts.com).



Scope of delivery:

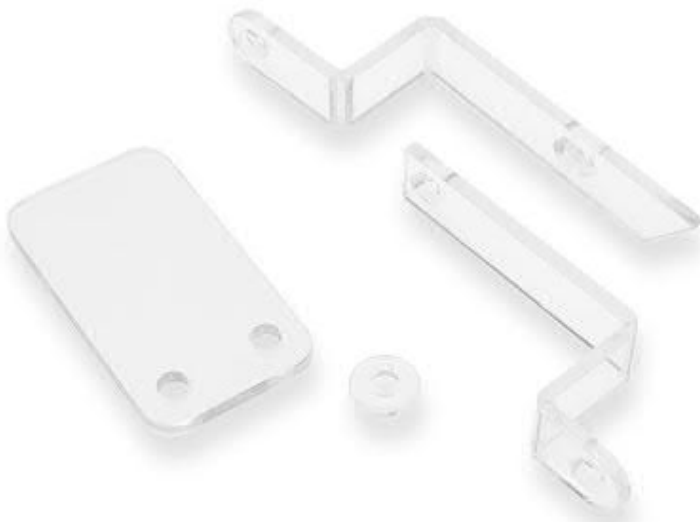


Required tools:

- Phillips screwdriver PH2
- Assembly Blades (optional)

Step 1: Upgrade left Ramp


1. Loosen the Phillips screw of the ramp on the left of the slingshot.

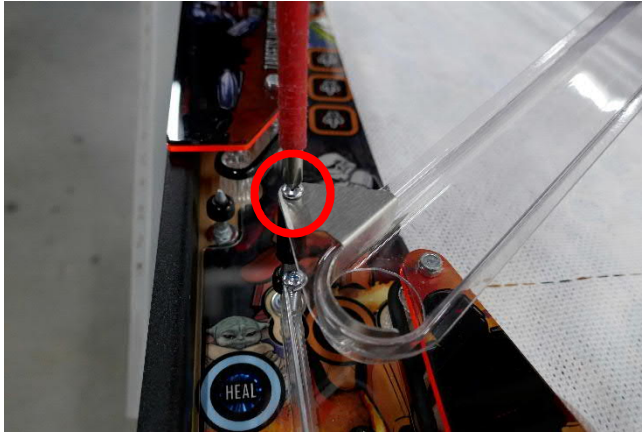


2. Remove the black plastic sleeve.



3. Pull off the foil from the longer, angled support bracket.

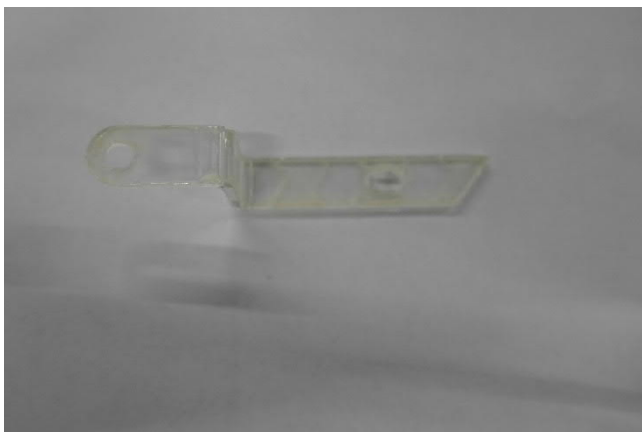

4. Put the plastic angle on the screw, mount the black plastic sleeve again and screw the ramp tight.

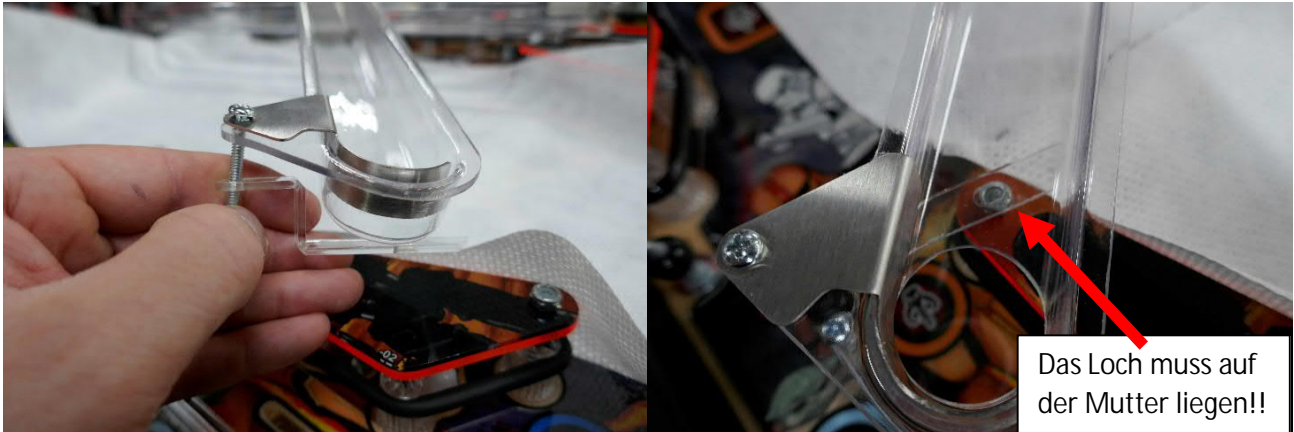


Step 2: Upgrade right Ramp


1. Loosen the Phillips screw of the ramp on the right of the Slingshot.




2. Remove the black plastic sleeve.

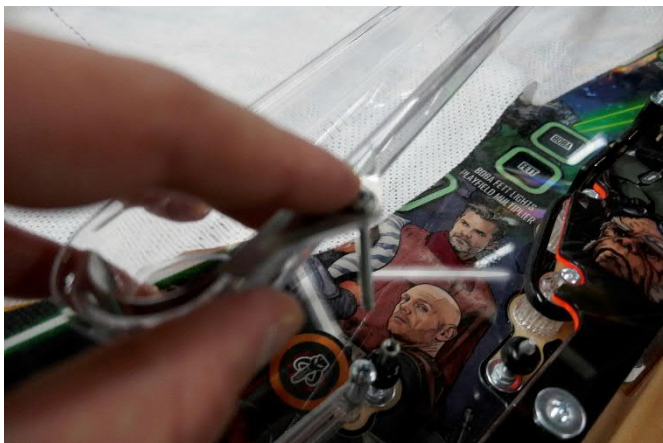


3. Pull the ramp out of the guide and set it aside.

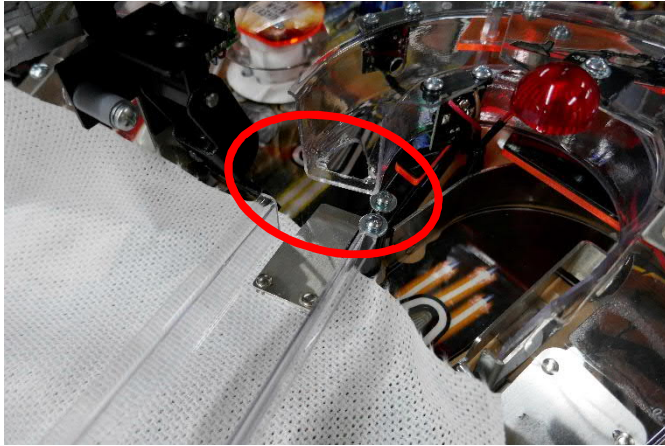


4. Loosen the two cross screws of the posts (where the ramp was pulled out).

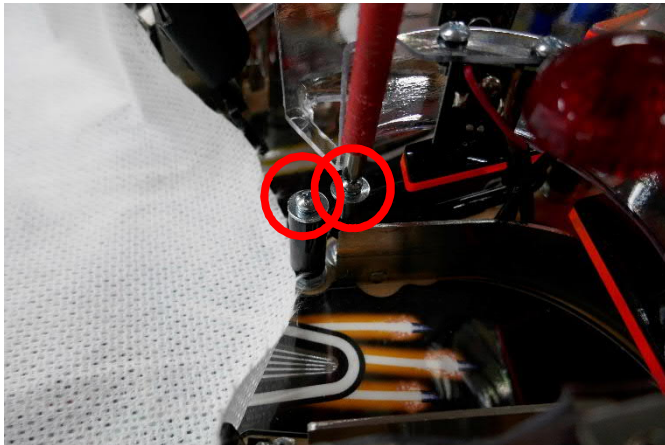


5. Remove foils from the supplied plastic and plastic washer.

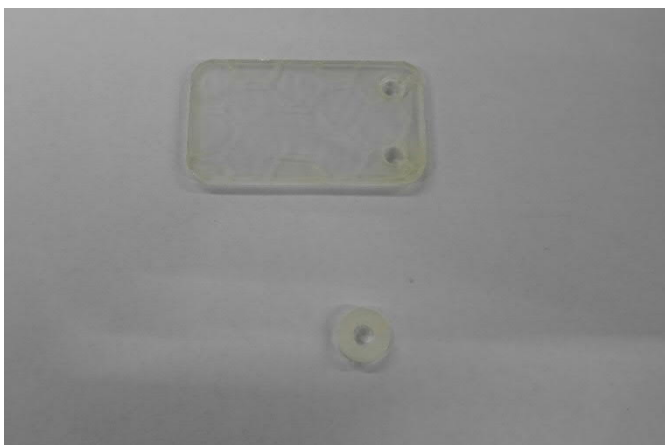

6. Mount the plastic and the plastic washer. The washer goes under the plastic. Then screw the "plastic sandwich" onto the two posts.

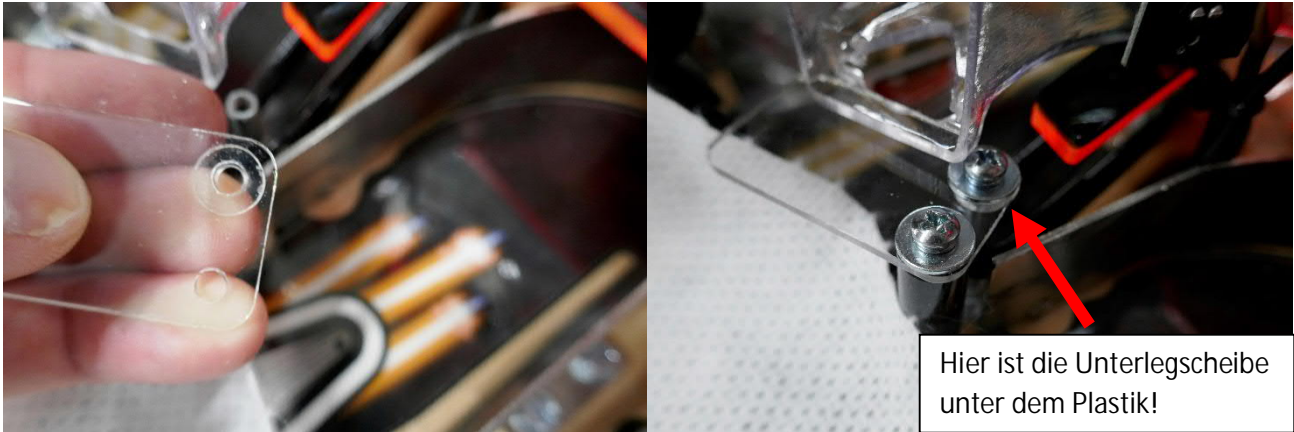

7. Push the ramp back into the guide.

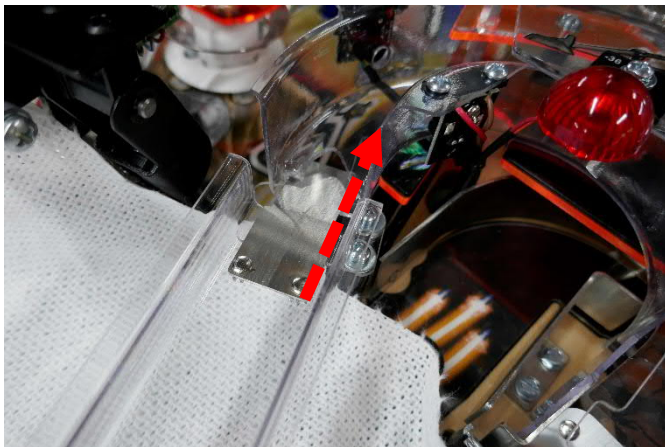

8. Remove foils from the shorter plastic angle.



9. Put the plastic angle on the screw, mount the black plastic sleeve again and screw the ramp tight.

